


# BODY SILL MOULDING INSTALLATION INSTRUCTIONS

All Passenger Cars

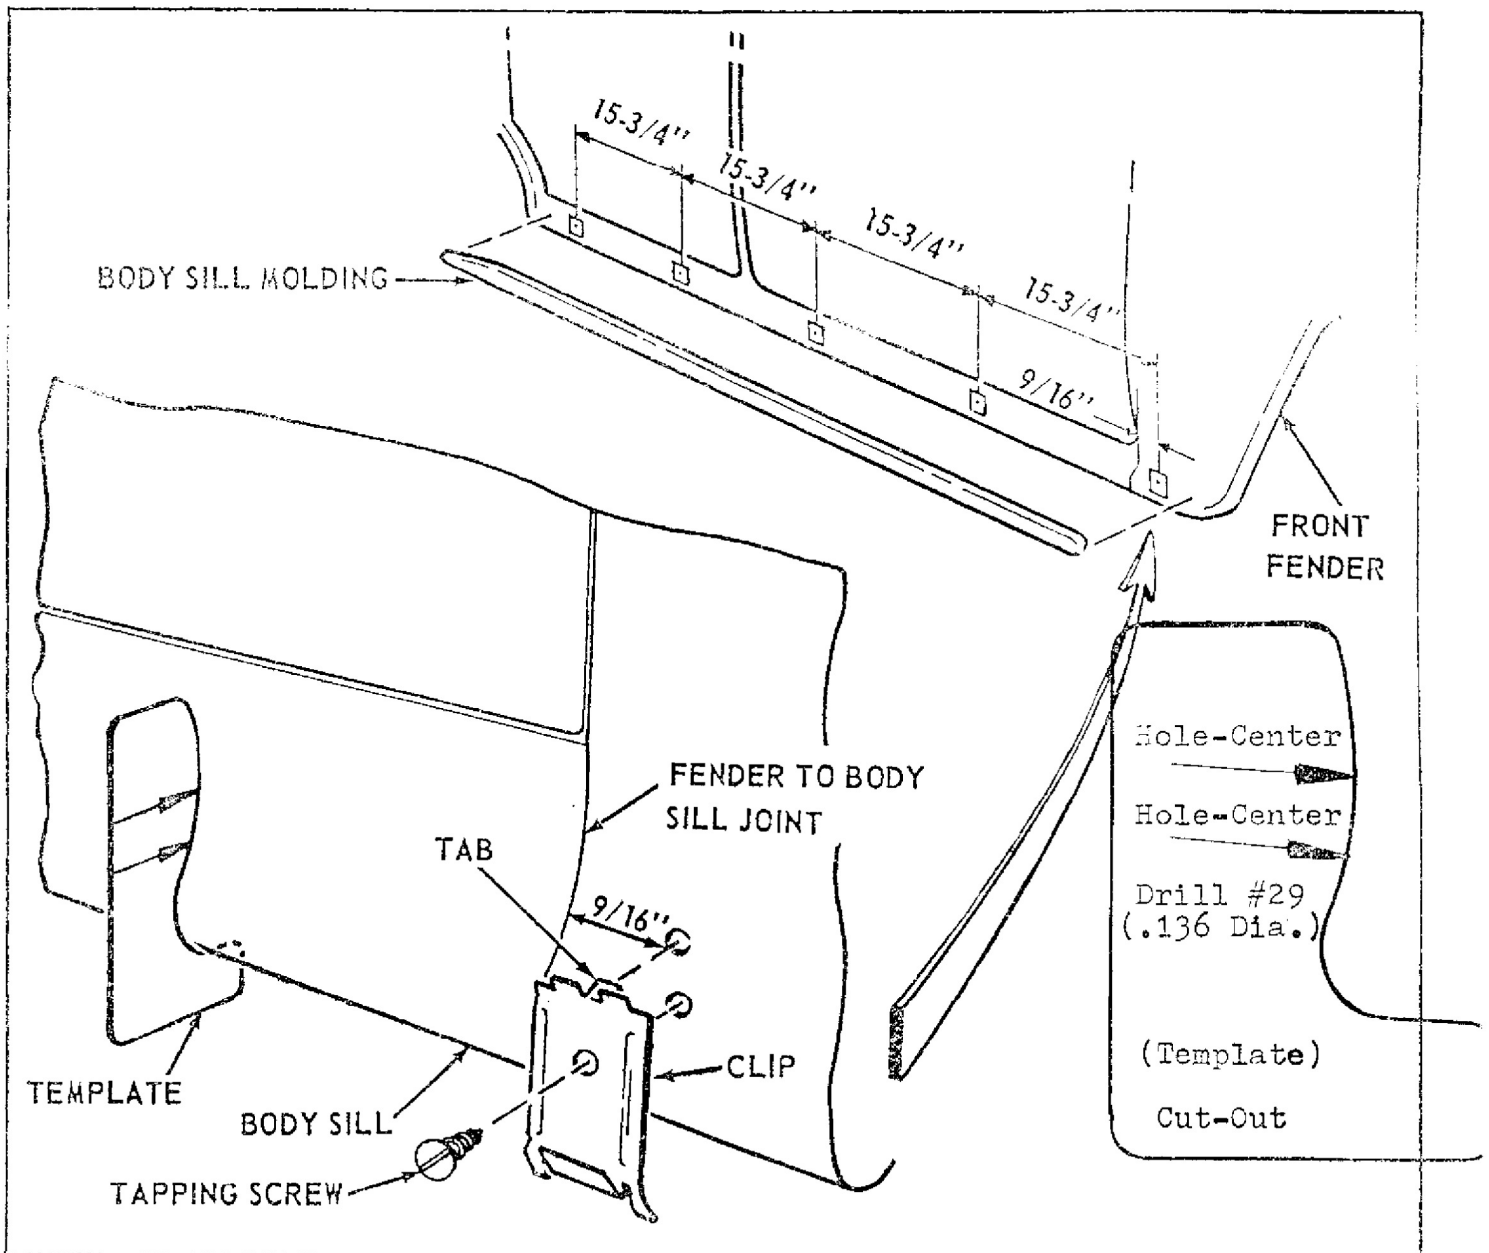

1. Fit the edge of the template against the bottom edge of the body sill,  $9/16''$  forward of the front fender to body sill joint, and mark off the two hole centers as indicated on the template.

2. Centerpunch the marked hole centers, and with a #29 drill, drill two  $.136''$  diameter holes.

3. Locate the template  $15-3/4''$  rearward from the drilled holes, mark off two hole centers, centerpunch, and drill two additional holes with the #29 drill.

4. Repeat operation 3, spacing the remaining holes  $15-3/4''$  apart, until a total of five sets of holes (10 holes) are drilled.

5. Secure the body sill molding clips to the body sill, with the upper tab locating the clip in the upper drilled hole, and the clip fastened through the lower hole with a  $3/8''$  tapping screw.

6. Slip the top edge of the molding over the clips, and snap down into place.

7. Repeat the above on the opposite side of the car.

PART NO. 3712408